 
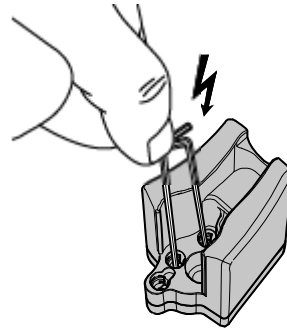 


Reset Powerpack

If you encounter problems with your Powerpack. If the light on it is off, does not flash. Or if the powerpack does not show up at all on the display of the main unit when it is set in the charger bay. Then try to reset the Powerpack according to the instruction below. Then set it in the charger for reboot.

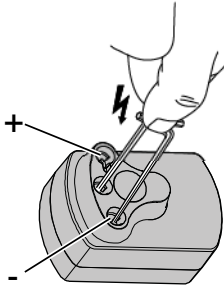

1. Make a hard reset by short circuiting the battery. Use a metal clip or similar to connect the **Middle** and the **Negative** connection on the Powerpack, see figure up of. Make sure you do not touch the + Positive connector (the one with a groove in the plastic).

Note! Do not get alarmed if there is a spark from the unit.

2. The indication light on the Powerpack will extinguish if lit
3. Put the Powerpack on the charger again and it will be reset and repaired to the Main unit.
4. After charging connect the Powerpack to the Tattoo machine.
5. If you still encounter problems contact InkMachines, see www.inkmachines.com.