 
 


If you encounter problems with your Powerpack and you have gone through the Troubleshooting guide in the RPS 600 manual, then reset the Powerpack according to the instruction below.

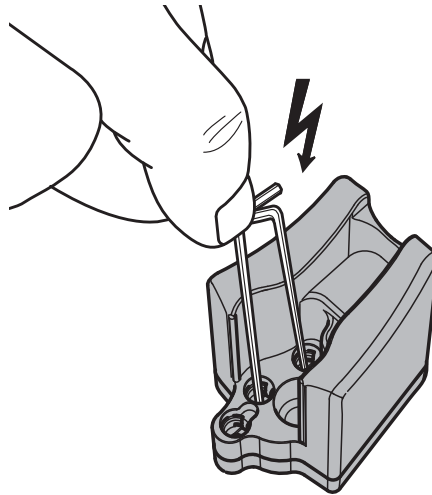

1. Make a hard reset by short circuiting the battery. Use a metal clip or similar to connect the middle and the top connection points on the Powerpack, see figure up of.

Note! Do not get alarmed if there is a spark from the unit.

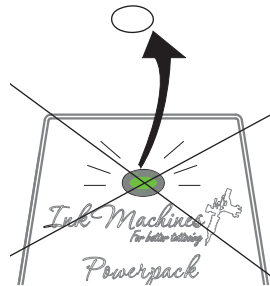

2. The indication light on the Powerpack will extinguish if lit
3. Put the Powerpack on the charger again and it will be reset and repaired to the Main unit.
4. After charging connect the Powerpack to the Tattoo machine.
5. If you still encounter problems contact InkMachines, see www.inkmachines.com.